


Wired Siren/Strobe

Optional accessory

General information

Project the alarm outside. The Wired Siren/Strobe is constructed of strong, rust free die-cast aluminum and is intended to be mounted outside. It is activated when the **tattletale™** siren and strobe goes off.

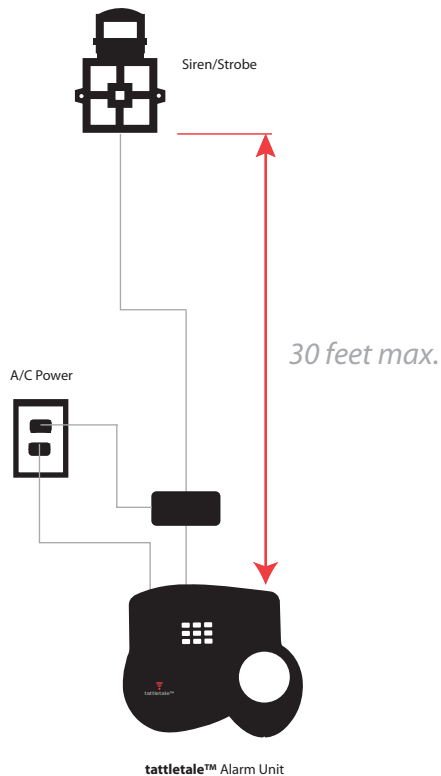

Protect Anything.
Anytime.
Anywhere.

Use ONE wired siren/strobe with each **tattletale™** alarm unit.

Mounting instructions

- Remove the back cover by loosening the two side screws. (See diagram 1)
- Mount the back plate onto a secure fixture. If you have to disconnect the front cover to mount it, remember the position of the two leads (red on top, black on the bottom).
- Replace the front cover and tighten the two side screws.
- Connect the individual components according to the diagrams.

Testing the remote siren/strobe

- Call 1.888.tell.on.u to put your account on test. The **tattletale™** does not need to be armed to test the siren/strobe.
- Press the * and # buttons at the same time to sound an instant alarm. (If your account is not on test when you do this, the police will be dispatched).
- Enter your 4 digit arming code to turn off the siren.
- The remote siren/strobe should activate when the siren and strobe on the **tattletale™** activates. If this does not happen, examine the connection between the plug and the jack on the back of the **tattletale™**.

Troubleshooting

- If the siren & strobe begins to sound when the **tattletale™** is not armed or during a non-alarm, the battery in the transmitter may need to be replaced.
- Open the transmitter connected to the **tattletale™** siren & strobe port and replace the battery with a 3.0 Volt Lithium Ion Type 123 cylindrical battery available at any photo store.