

Programmer

Optional accessory

General Information

The **tattletale™** Programmer is designed to encrypt certain Inovonics FA transmitters to an individual **tattletale** base unit. The base unit can have a total of 16 sensors programmed to 8 zones, with an A and B side for each zone. Default zone types are listed below.


DEFAULT ZONE TYPES:

ZONE 1 = DELAY	ZONE 5 = INSTANT
ZONE 2 = DELAY	ZONE 6 = INSTANT
ZONE 3 = DELAY	ZONE 7 = DELAY
ZONE 4 = INSTANT	ZONE 8 = 24-HOUR/ FIRE*

***IMPORTANT: Do not program any type of sensor except smoke detector or rate of rise sensor to Zone 8 without changing zone type first.**

Changing zone types:

Refer to "Programming the tattletale alarm unit" on a separate sheet or call 1.888.tell.on.u.

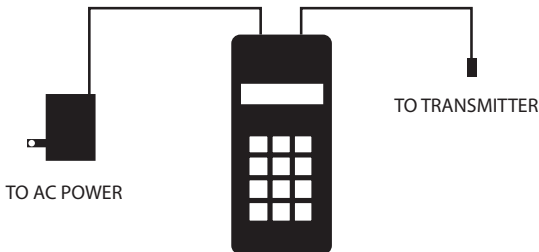

To program a sensor:

- Connect transformer to AC power
- Connect power connector to Programmer
- Connect programming cable to Programmer
- Programmer will automatically power-up
- Connect other end of programming cable to 3 pins on transmitter
- Follow on-screen instructions, press reset button on sensor
- When complete check the programming by observing the corresponding ZONE LIGHTS on the tattletale alarm unit.

Programming tips:

- The HOUSE CODE can be found in the tattletale alarm unit package or by calling tattletale customer service.
- STAR (*) KEY = YES/OK/ENTER
- POUND (#) KEY = NO/ABORT/BACK
- PRESS RESET BUTTON ON TRANSMITTER (TX) WHEN PROMPTED BY SCREEN
- SEE INDIVIDUAL TRANSMITTER INSTRUCTION SHEETS FOR RESET BUTTON LOCATIONS
- KEYFOB USER #S = 10,11,12,13,14

Sensor types:

Type 1= keyfob
Type 2 = door/window
Type 3 = loop, indoor motion, outdoor motion, smoke detector, door/window with external contact
Type 4 = Rattler, Container Motion, Liquid Level sensor
Rate of Rise sensor, Glassbreak Detector, Panic Pendant, Hi Temperature and Low-Temperature sensors

IMPORTANT:

THE PROGRAMMER WILL NOT MAKE CORRECTIONS FOR OPERATOR ERROR CONCERNING HOUSE CODES,ZONE SELECTION AND SENSOR TYPES.



Protect Anything.
Anytime.
Anywhere.