

Smoke Detector

Indoor Sensor

Changing the Battery

- You will know that the battery in the smoke detector needs to be changed when it's corresponding zone light on the tattletale™ begins to flash rapidly and the smoke detector chirps every 30 seconds.
- Remove the smoke detector from the ceiling (or wall) and remove the bottom cover by unscrewing it counter clockwise one quarter turn.
- Remove the battery cover.
- Pull black ribbon to remove batteries.
- Pull top cover straight off. (see diagram)
- Push detector portion of sensor out of casing. (see diagram)
- Replace batteries with new ones. 3V Lithium CR123A batteries are readily available at most stores that sell batteries.
- Press the Reset button (see diagram)
- Replace the covers making sure they snap into place.
- Replace the smoke detector and test following the following steps.



After replacing batteries press Reset Button.



Protect Anything.
Anytime.
Anywhere.

Use up to 48 sensors for each tattletale™ alarm unit.

Tattletale strongly recommends that all systems utilizing smoke and or heat detector sensors plug their unit into a phone line for backup purposes.

General information

The remote smoke detector can be placed up to 2000 feet away from the tattletale™ depending on structures and objects in-between the smoke detector and the tattletale™. It used photoelectric technology to detect smoke (not heat) and it continually monitors its own sensitivity and operational status. **The tattletale™ does NOT need to be armed to send a smoke alarm.** The two 3.0V Lithium Batteries that are included will typically last for about 1 year.

Mounting instructions

The best location for the smoke detector is at a high point where smoke will accumulate. Locate away from air conditioners, heating registers and any other ventilation source that may interfere with smoke entering the alarm.

Remove the back mounting plate by twisting it counterclockwise. Use the provided mounting screws to attach the mounting plate to the ceiling.

Reattach the smoke detector to the mounting plate by lining up the raised tab on the lip of the smoke detector with the slot on the lip of the mounting plate and turning the detector clockwise until it snaps into place.

General maintenance notes

Understanding the LED: Flashes every 9 seconds – operating normally. On – detects smoke. Off – Trouble or maintenance is required. It's a good idea to clean the smoke detector's smoke entry chamber every 3 months with a vacuum cleaner or canned air. You do not need to open up any part of the smoke detector to do this.

Testing the smoke detector

IMPORTANT: When the "Silence/Test" button is pressed the tattletale™ will actually make a call to tattletale™ Dispatch. It is important that you put your account on test before you test your smoke detector.

- Call 1-888-835-5668 to put your account on test.
- Press the test button on the smoke detector. (Note the distinctive siren for the smoke detector.)
- Enter the 4 digit arming code into the tattletale™ to silence the siren. If the Zone 8 LED remains solid, press the # button to clear it.